

LOCTITE 3D MED9851™

General Purpose Clear

LOCTITE®

Henkel Corporation loctite3dp@henkel.com







LOCTITE 3D MED9851™

LOCTITE 3D MED9851 CL a high-performance, high modulus material with excellent flexural and tensile physical properties. Stiffness combined with toughness make this material ideal for use in a wide variety of impact resistant medical device applications.

LOCTITE 3D MED9851 CL is capable of meeting ISO 10993-5, -10 and -23 standards for biocompatibility when processed using a validated workflow. Certificates of Compliance are available upon request.

LOCTITE 3D MED9851 CL is compatible with a broad range of DLP machines.



Benefits:

- Capable of meeting ISO 10993-5, 10993-10 & 10993-23standards
- Parts can function at body temperature
- Outstanding surface finish
- Excellent machineability



Ideal for:

- Medical devices
- Orthotics & Prosthetics
- Eyewear
- Medical equipment components



Markets:



HDT at 0.455 MPa (°C)	68
Elongation at Break (%)	40
Young's modulus (Mpa)	2300
Tensile Stress at Break (MPa)	45

^{*}Values shown are linked to LOCTITE MED9851 CL as reference, please refer to the specific mechanical properties for each of the colors shown in this document







PROPERTIES

Mechanical Properties	Measure	Method	Green	Post Processed
Young's Modulus	МРа	ASTM D638	1600 – 1750 ^[1]	2100 – 2300 ^[1]
Tensile Stress at Yield	МРа	ASTM D638	32 - 38 ^[1]	50 - 55 ^[1]
Elongation at Yield	%	ASTM D638	$4.4 - 4.6^{[1]}$	4.6 – 4.8 ^[1]
Tensile Stress at Break	МРа	ASTM D638	30 -34 ^[1]	40 - 45 ^[1]
Elongation at Break	%	ASTM D638	-	35-40 ^[1]
IZOD Impact (Notched)	J/m	ASTM D256	54 - 68 ^[2]	40 - 50 ^[2]
Shore Hardness (3s)	D	ASTM D2240	-	80 – 81[3]
Other Properties				
HDT at 0.455 MPa	°C	ASTM D648	-	65 - 68 ^[4]
HDT at 1.82 MPa	°C	ASTM D648	-	52 - 57 ^[4]
Water Absorption (24hr)	%	ASTM D570	-	1.84 ^[5]
Water Absorption (72hr)	%	ASTM D570	-	3.82 ^[5]
Solid Density	g/cm³	ASTM D1475	1.18 ^[6]	1.18 ^[6]
Biocompatibility				
Cytotoxicity		ISO10993-5	-	Comply [7]
Sensitization		ISO10993-10	-	Pending
Irritation		ISO10993-23	-	Pending

Test parameters:
"All specimen are printed unless otherwise noted All specimen were conditioned in ambient lab conditions at 19-22°C / 40-60% RH for at least 24 hours." ASTM Methods D638 Type IV, 5 mm/min, D790-B, 2 mm/min, D648, D256 Notched IZOD (Machine Notched), 6 mm x 12 mm, D570 0.125° x 2° Disc24hr@ 25°C, D2240, Type "D" (3 seconds), D7867, D1475

Internal Data Sources:
[1]GFN4915421, [2]FOR390791 [3]FOR515851, [4]GFN516194, [5]FOR417077, [6]FOR525660, [7]GFN516201







PROPERTIES

Liquid Properties	Measure	Method	Value
Viscosity at 25°C (77°F)	сР	ASTM D7867	450 - 530 ^[8]
Liquid Density	g/cm³	ASTM D1475	1.06 ^[9]

Eyewear properties	Measure	Method	Green	Post Processed
Resistance to perspiration	-	ISO 12870	-	Comply ^[10]
Mechanical stability	-	ISO 12870	-	Comply ^[10]
Resistance to ignition	-	ISO 12870	-	Comply ^[10]
Resistance to optical radiation	-	ISO 12870	-	Comply ^[10]

Test parameters:
"All specimen are printed unless otherwise noted All specimen were conditioned in ambient lab conditions at 19-22°C / 40-60% RH for at least 24 hours." ASTM Methods D638 Type IV, 5 mm/min, D790-B, 2 mm/min, D648, D256 Notched IZOD (Machine Notched), 6 mm x 12 mm, D570 0.125° x 2° Disc24hr@ 25°C, D2240, Type "D" (0, 3 seconds), D7867, D1475

Internal Data Sources: [8]<u>FOR481014</u>, [9] <u>FOR395792</u>, [10]<u>GFN519016</u>







WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at https://www.loctiteam.com/printer-validation-settings

PRINTER SETTINGS

LOCTITE 3D MED9851 CL is formulated to print optimally on industrial DLP printer. Read the safety data sheet carefully to get details about health and safety instructions. Recommended print parameters:

- Shake resin bottle well before usage
- Temperature: 20°C to 35°C
- Intensity: 3 mW/cm² to 8 mW/cm²

Settings: 385nm at 5mW/cm ²	Measure	Method	Value
Layer Thickness	μm	Internal	100
Burn-In region	S	Internal	12
Transition region	S	Internal	8
Model region	S	Internal	5
Settings: 385nm at 5mW/cm ²	Measure	Method	Value
E _C	mJ/cm²	Internal	3.1 ^[9]
D _P	mm	Internal	0.18 ^[9]
Settings: 385nm at 5mW/cm ²	Measure	Method	Exposure time

Settings: 385nm at 5mW/cm ²	Measure	Method	Exposure time
$D_C = 50\mu m$	S	Internal	2.5
$D_C = 100\mu m$	S	Internal	5

Test parameters

Exposure times are calculated without a safety factor

Internal data source: [9] FOR425136







WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at https://www.loctiteam.com/printer-validation-settings

CLEANING

LOCTITE 3D MED9851 CL requires post processing to achieve specified properties. Prior to post curing, support structures should be removed from the printed part, and the part should then be washed. Use compressed air to remove residual solvent from the surface of the material between intervals.

Post Process Step	Agent	Method	Duration	Intervals	Additional Info
Cleaning Step #1	TPM or IPA	Ultrasonic	2 min	1 or 2	Dry after each interval
Cleaning Step #2	TPM or IPA	Ultrasonic	1 min	1	
Dry	n.a.	Compressed air	10 to 60 s	1	Air pressure (50psi)
Wait before post curing	IPA	Ambient condition	60 min	1	Room temperature
Wait before post curing	TPM	Oven	60 min	1	50°C

POST CURING

LOCTITE 3D MED9851 CL requires post curing to achieve specified properties. It is recommended that either an LED or wide spectrum lamp be used to post cure parts.

UV Curing Unit	UV Source	Intensity	Cure time per side	Additional Settings (Shelf, Output Energy)
Loctite CL36	405nmLED	80 mW/cm² at 405 nm	10 min	100% top & side

STORAGE

Store LOCTITE MED9851 Clear in the unopened container in a dry location. Optimal Storage: 8°C to 30°C. Storage below 8°C or above 30°C can adversely affect product properties. Material removed from containers may be contaminated during use. For this reason, filter used resin with 190µm mesh filter before placing back into proper storage container.











THERMAL INFLUENCE ON MECHANICAL PROPERTIES

LOCTITE 3D MED9851 CL has been tested according to ASTM D638 at varied environmental temperatures, from -40°C to 100°C. All samples were printed in the same print job using a validated workflow. Mechanical testing was conducted according to ASTM D638. Before each test series samples were conditioned for 60 minutes at the specific test temperature.

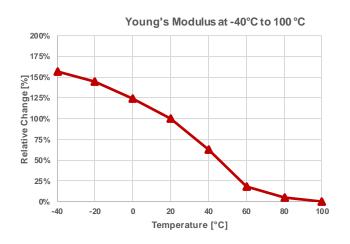

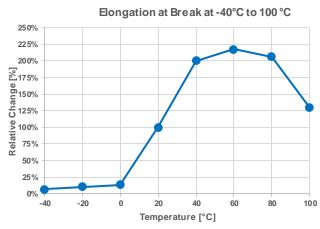

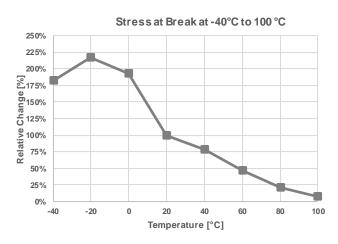

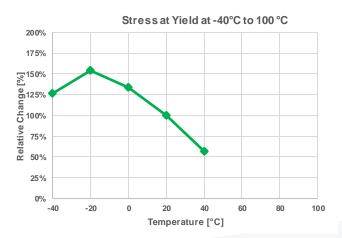

Test parameters:

ASTM D638, Type IV, Pull speed: 5 mm/min, Young's modulus measured at 0.1-1% (regression),

Internal Data Sources: [1] FOR446342







NOTE

The information provided in this Technical Data Sheet (TDS) including the recommendations for use and application of the product are based on our knowledge and experience of the product as at the date of this TDS. The product can have a variety of different applications as well as differing application and working conditions in your environment that are beyond our control. Henkel is, therefore, not liable for the suitability of our product for the production processes and conditions in respect of which you use them, as well as the intended applications and results. We strongly recommend that you carry out your own prior trials to confirm such suitability of our product.

Any liability in respect of the information in the Technical Data Sheet or any other written or oral recommendation(s) regarding the concerned product is excluded, except if otherwise explicitly agreed and except in relation to death or personal injury caused by our negligence and any liability under any applicable mandatory product liability law.

In case products are delivered by Henkel Belgium NV, Henkel Electronic Materials NV, Henkel Nederland BV, Henkel Technologies France SAS and Henkel France SA please additionally note the following: In case Henkel would be nevertheless held liable, on whatever legal ground, Henkel's liability will in no event exceed the amount of the concerned delivery.

In case products are delivered by Henkel Colombiana, S.A.S. the following disclaimer is applicable:

The information provided in this Technical Data Sheet (TDS) including the recommendations for use and application of the product are based on our knowledge and experience of the product as at the date of this TDS. Henkel is not liable for the suitability of our product for the production processes and conditions in respect of which you use them, as well as the intended applications and results. We strongly recommend that you carry out your own prior trials to confirm such suitability of our product. Any liability in respect of the information in the Technical Data Sheet or any other written or oral recommendation(s) regarding the concerned product is excluded, except if otherwise explicitly agreed and except in relation to death or personal injury caused by our negligence and any liability under any applicable mandatory product liability law.

In case products are delivered by Henkel Corporation, Resin Technology Group, Inc., or Henkel Canada, Inc. the following disclaimer is applicable:

The data contained herein are furnished for information only and are believed to be reliable. We cannot assume responsibility for the results obtained by others over whose methods we have no control. It is the user's responsibility to determine suitability for the user's purpose of any production methods mentioned herein and to adopt such precautions as may be advisable for the protection of property and of persons against any hazards that may be involved in the handling and use thereof. In light of the foregoing, Henkel Corporation specifically disclaims all warranties expressed or implied, including warranties of merchantability or fitness for a particular purpose, arising from sale or use of **Henkel Corporation's products**. **Henkel Corporation specifically disclaims any liability for consequential or incidental damages of any kind, including lost profits**. The discussion herein of various processes or compositions is not to be interpreted as representation that they are free from domination of patents owned by others or as a license under any Henkel Corporation patents that may cover such processes or compositions. We recommend that each prospective user test his proposed application before repetitive use, using this data as a guide. This product may be covered by one or more United States or foreign patents or patent applications.

Trademark Usage

Except as otherwise noted, all trademarks in this document are trademarks of Henkel Corporation in the U.S. and elsewhere. ® denotes a trademark registered in the U.S. Patent and Trademark Office.





FIND OUT MORE AT LOCTITEAM.COM

LOCTITE®

Henkel Corporation loctite3dp@henkel.com

